

The Wind Generator (A42) is designed for use with the following products:

- Eco Nest Box (B1) (requires the Daylight Sensing Battery Box and the Rechargeable High Capacity Battery Set)
- Garden Nest Box (B2) (requires the Rechargeable High Capacity Battery Set)
- Wildlife Camera (C10) (requires the Rechargeable High Capacity Battery Set)
- Bird Table Camera (C11) (requires the Daylight Sensing Battery Box and the Rechargeable High Capacity Battery Set)
- Daylight Sensing Battery Box (A32) (requires the Rechargeable High Capacity Battery Set)
- Rechargeable High Capacity Battery Set (A40) (requires a battery box from the above)
- Solar Panel (A41) (can be fitted in addition to a Wind Generator)
- Town Garden Nesting Package (P80) (requires the Rechargeable High Capacity Battery Set)
- Solar Nesting Package (P82)
- Wildlife Camera Package(P83) (requires the Rechargeable High Capacity Battery Set)