

The following accessories are suitable for use with the Garden Nest Box (B2):

- Control/Battery Extension Cable (A34)
- Mains to Battery Extension Cable (A35)
- Enjoy Birds More by PC (A36)
- Video to USB Converter (A37)
- PC Video Viewer (A38)
- Rechargeable High Capacity Battery Set (A40)
- Solar Panel (A41) (requires the Rechargeable High Capacity Battery Set)
- Wind Generator (A42) (requires the Rechargeable High Capacity Battery Set)
- 25mm Hole Plate (A43)
- 28mm Hole Plate (A44)
- Garden Box (A48)
- Network Server (A50)
- Scart Adaptor (A51)