

The following accessories are suitable for use with the Eco Camera Kit (K1):

- Large Battery Box (A31)
- Daylight Sensing Battery Box (A32)
- Battery to Camera Extension Cable (A33)
- Mains to Battery Extension Cable (A35)
- Enjoy Birds More by PC (A36)
- Video to USB Converter (A37)
- PC Video Viewer (A38)
- Rechargeable High Capacity Battery Set (A40) (requires the Daylight Sensing Battery Box)
- Solar Panel (A41) (requires the Daylight Sensing Battery Box and the Rechargeable High Capacity Battery Set)
- Wind Generator (A42) (requires the Daylight Sensing Battery Box and the Rechargeable High Capacity Battery Set)
- Eco Box (A47)
- Network Server (A50)
- Scart Adaptor (A51)