

# Enjoy Birds More

Video to USB  
Converter  
(A37)



Quick Start Guide

## **Set up to Receive Video on your PC**

1. To get your Video to USB Converter installed, please follow the “Quick Installation Chart” and “Hardware Installation” in the enclosed leaflet.
2. Install the ShowBiz 3.5 software for viewing and editing your video as shown on page 4 of the enclosed leaflet.
3. Enjoy watching, capturing and editing your video using ShowBiz 3.5 as described in the leaflet, or other software on your computer.



## **Care for the Environment**

As you might expect, Enjoy Birds More cares deeply about the Environment. We have adopted an Environmental Policy designed to demonstrate our commitment to operating our business in harmony with the natural and man made environments. If you wish to see the full policy, it is available to read on our web site.

This product, as electrical equipment (denoted by this symbol) may contain substances that can be hazardous to the environment if not disposed of properly.



If you have purchased this product to replace another similar product which you no longer need, and send the previous one to us, we will be happy to recycle it for you at no cost. When you have finished using this product, please dispose of it responsibly. We would suggest using your local specialist recycling and waste treatment facility, or returning it to us for recycling. There is no charge for this service.

### **Windows 7 Users:**

Occasionally (depending on the set up of your individual pc), going through this process does not initially load the correct driver for your device.

If you are having problems, you can check as follows:

Plug in your Video to USB Converter.

In Device Manager under "Sound, video and game controllers" does it state "USB EMP Audio Driver"? If so, it needs to be changed to "USB Audio Device".

To change the driver, please follow these instructions:

Right click 'USB EMP Audio Driver' then 'Update Driver Software'

Click on 'Browse my computer for driver software'

Then 'let me pick from a list .....

Tick 'show compatible hardware'.

This should give you two driver options, Window's own 'USB Audio Device' and the 'USB EMP Audio Device' driver.

Select the 'USB Audio Device'.

Reboot your pc.

Enjoy Birds More Limited  
Eastcote House  
Barston Lane  
Eastcote  
Solihull  
West Midlands  
B92 0HS UK

Telephone: +44 (0) 1675 442544

Fax: +44 (0) 1675 442421

Web site: [www.enjoybirdsmore.co.uk](http://www.enjoybirdsmore.co.uk)

Email: [mail@enjoybirdsmore.co.uk](mailto:mail@enjoybirdsmore.co.uk)

This publication, our products and our designs are  
© Copyright 2011 Enjoy Birds More Limited  
and protected by UK Patent 2520252



All our products are tested  
for compliance with the  
relevant directives, and carry  
the CE Mark

WEEE Producer Registration Number WEE/HB0002ZR

Battery Producer Registration Number BPRN00576